

PowerXL™


SENSIMAX™ **BLENDER**



BL7019-OMP-UK

Use and Care Manual

Parts

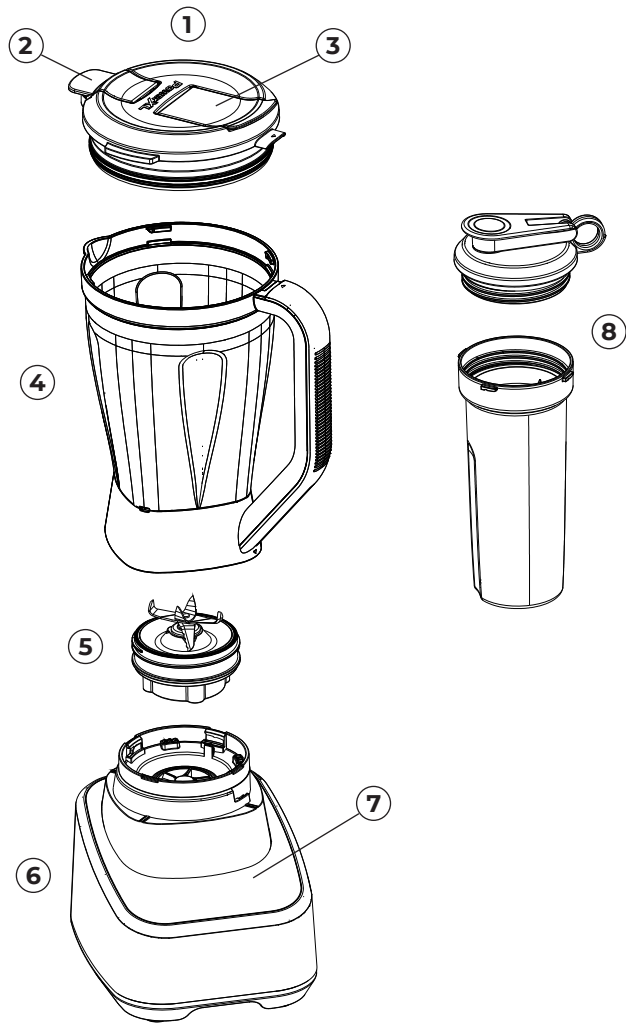

- | | |
|-----------------------|-----------------------------------|
| 1. Blender lid | 5. Blade assembly |
| 2. Pour spout | 6. Appliance base |
| 3. Ingredient slot | 7. Touch screen |
| 4. Large blending jar | 8. Personal blending jar with lid |

Product may vary slightly from what is illustrated.

Read the instructions, keep them safe, pass them on if you pass the appliance on.
Remove all packaging before use.

IMPORTANT SAFEGUARDS


Follow basic safety precautions, including:

- Read all instructions.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
- Children must not use or play with the appliance.
- Keep the appliance and cable out of reach of children.
-  To avoid injury, take care when handling the blades, emptying the jug, and cleaning.
-  Don't add hot liquid (over 40°C) as it may be ejected due to sudden steaming.
-  Do not immerse in any liquid.
- Misuse of the appliance may cause injury.
- Unplug the appliance before assembly, disassembly, or cleaning.
- Don't leave the appliance unattended while plugged in.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified to avoid a hazard.
- Switch off (O) before fitting or removing the jug to the motor unit.
- Don't use accessories or attachments other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't operate the appliance if it's damaged or malfunctions.
- Don't run the motor continuously for more than 2 minutes, it may overheat. After 2 minutes switch off for at least 2 minutes, to recover.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Unintended use may cause potential injury.
- Never put a hand in the jar when it is placed on the base unit.
- WARNING — Always operate the blender with the lid or the guard in position as indicated in the instructions.

SAVE THESE INSTRUCTIONS

This product is for household use only.

Touch screen

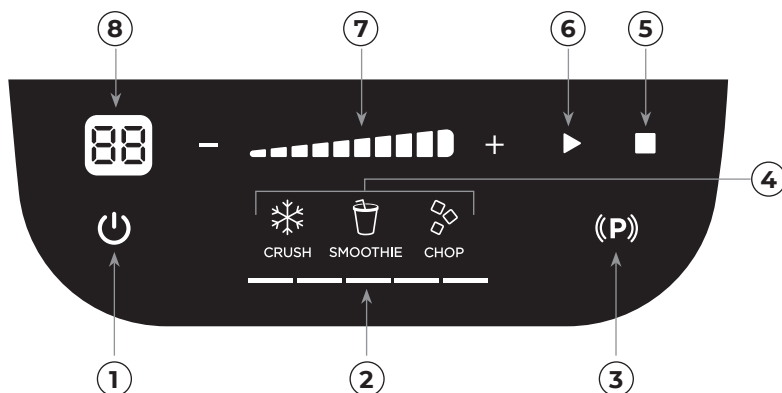

- | | |
|----------------------------|------------------------------|
| 1. Power On/Off | 5. Stop |
| 2. Sensing Light Bar | 6. Start |
| 3. Pulse | 7. Speed Slider with – and + |
| 4. Smart Sensing Functions | 8. LCD Display |

POWER:

The power symbol (⏻) illuminates when the unit is plugged in and in standby mode. Press ⏻ to see the available functions and make selections. If the unit sits without interaction, the screen will go back into standby mode where only the power button is half illuminated.

SMART SENSING FUNCTIONS:

CRUSH, SMOOTHIE, and CHOP are all smart sensing functions, and will adjust depending on the food in the blender.

Press the desired function and press play (▶). A countdown will start after initial sensing, but is only a guidance. Time will adapt as the unit senses ingredients and thickness. Unit will also indicate when more liquid is needed by displaying **AL** (Add Liquid).

MANUAL MODE:

To manually choose a desired speed, press the + or – buttons on the speed slider to adjust to a number on the LCD display or a level on the bar. Press play (▶) to start blender.

Speed adjustments can be made while the unit is running by pressing the + or – buttons and pressing Pulse ((P)).

Note: When using the Pulse function, do not use for more than 5 seconds at a time, allowing the blender to rest briefly between each pulse. Do not use Pulse ((P)) more than 2 minutes in total. This helps break up ice and distribute the ingredients.

Press stop (■) to stop the blender.

Instructions for use

Functions

FUNCTION	USE
Crush (SMART SENSING)	Used for crushing ice and frozen food. Chops up to 2 cups frozen food or ice. Add liquid for larger volume ice crushing.
Smoothie (SMART SENSING)	Used for making fruit smoothies and protein drinks.
CHOP (SMART SENSING)	Used to chop fruits and vegetables, cooked meats, and nuts, coarse-to-fine.
PULSE (MANUAL CONTROL)	Used when short bursts of power are needed for blending thick mixtures, such as thick smoothies or milkshakes. Pulse also helps to break up ice and distribute ingredients.
+/- SPEED SLIDER (MANUAL CONTROL)	Used to manually blend ingredients or break up foods. Use lower speeds to remove lumps from gravies, medium speeds to make cookie, cereal, or bread crumbs, and higher speeds to puree fruits and vegetables.

Instructions for Use

Getting started

- Remove all packing material, any stickers from the product, and the plastic band around the plug.
- Please go to <http://uk.powerxlproducts.com/register-product> to register your warranty.
- Remove and save literature.
- Wash all removable parts as instructed in Care and Cleaning Section of this manual.

Blender Assembly

1. Turn jar upside down and place flat on counter top or work surface.
2. Place the blade assembly in bottom opening of the jar with blades down.

Caution: Blades are sharp. Handle carefully.

3. Rotate blade assembly clockwise until it is tight.
4. Turn assembled jar right side up.
5. Place blender lid with cap on top of jar and align with arrows.
6. Unwrap power cord from storage area under the appliance base.
7. Place jar assembly onto the appliance base and turn clockwise until jar locks onto base and arrows align.
8. Plug appliance into outlet. Blender is ready for use.

Using the blender

Important: Appliance should always have lid in place when in use.

Caution: Do not place jar onto base when motor is running.

1. Make sure appliance is OFF.
2. Place foods to be blended into jar. For best results place ingredients in jar in the following order: liquids, powders, soft foods, hard foods, ice.
3. Make sure lid is securely on jar and lid cap is in place.

Note: When in use, do not leave blender unattended. When using hard foods, such as ice or cheese, keep one hand on the lid to keep blender in place.

4. Select the speed or function that best suits your desired task.
(See CONTROLS CHART).
5. You may drop ingredients through the ingredient slot while the blender is running.

Instructions for Use

Important: Do not remove the lid while the blender is running.

6. Make sure blades have completely stopped before attempting to remove the jar from the base.
7. To remove the jar, rotate counterclockwise, grasp the handle, and lift up.
8. Remove lid to serve.

Note: Unplug the appliance when not in use.

Using the personal blender jar

Caution: Do not blend hot liquids in the personal jar.

1. Make sure appliance is OFF.
2. Place the personal blender jar on a flat surface with the open end facing up. Fill the jar with ingredients. Do not fill ingredients past the “MAX.” marking.
3. For best results place ingredients in jar in the following order: liquids, ice, hard foods, soft foods, powders.
4. Place blade assembly in the personal jar with blades down and rotate clockwise until it is tight. It is important to tighten to prevent leaking during blending.
5. Turn personal jar upside down and place on the blender base.
6. Select the appropriate speed or use Pulse **((P))** to blend to desired consistency.

Important: Hold the personal jar with your hand while blending.

7. Once blending has finished, remove the personal jar by lifting off the base. Turn the jar over and place it on a flat surface.

Note: Always make sure blades have stopped moving before removing jar.

8. Remove the jar base from the personal jar by turning counterclockwise. Then carefully remove blade assembly.
9. Place the personal jar drinking lid on the personal jar and enjoy your delicious drinks on-the-go.

Caution: Blades are sharp. Handle carefully.

Note: The maximum rating is based on the blender jar attachment. The power input of the optional personal jar is less than the allowable deviation.

Important: If the jar gets stuck on the blending base or begins to loosen from the jar base, follow these steps:

- a. Unplug the unit.
- b. Turn the jar clockwise to tighten jar onto the jar base.

Instructions for Use

Blending tips and tricks

- Cut food into pieces no larger than $\frac{3}{4}$ " for use in the blender.
- When preparing foods that have several different kinds of ingredients, always add liquid ingredients first.
- When ingredients splatter onto the sides of the jar or the mixture is very thick, press Stop (■) to turn appliance off. Remove the lid and use a rubber spatula to scrape down the sides of the jar and to redistribute the food, pushing food toward the blades. Replace the lid and continue blending.
- When making bread crumbs make sure blender jar is completely dry.
- When using the Pulse **((P))** function, do not use for more than 5 seconds at a time, allowing the blender to rest briefly between each pulse.
Do not use Pulse **((P))** more than 2 minutes in total. This helps break up ice and distribute the ingredients.
- Use Pulse **((P))** when preparing beverages that include ice cubes or anything frozen; this helps to produce a smoother texture.
- It is helpful to begin the blending process on the lowest speed and then increase to a higher speed, if necessary.
- To stop blending at any time, press Stop (■).
- Do not store foods in the blending jar.
- Do not overfill the blender (the blender is more efficient with less rather than more).
- Do not run blender continuously for longer than 2 minutes. Scrape down sides of blending jar, if necessary, and continue blending.
- Do not use if blending jar is chipped or cracked.
- It is not recommended to use your blender to beat egg whites, mix bread dough, mash potatoes, or grind meats.

DO NOT PLACE ANY OF THE FOLLOWING IN THE BLENDER:

- Large pieces of frozen foods
- Tough foods such as raw turnips, sweet potatoes and potatoes
- Bones
- Cured meats such as hard salami or hard pepperoni
- Boiling liquids (cool for 5 minutes before placing in blending jar)

Troubleshooting

ERROR MESSAGES

AL

The screen will display “AL” for “add liquid”. This means the recipe is too thick and there is an air bubble over the blades. To resolve, add liquid and/or stir and mix. Continue by entering Smart Functions, or choose a manual speed.

H

The screen will display “H” prior to an over heated situation. This is a precaution to extend the life of your blender motor. To resolve, press power to power down and allow 1 minute for your blender to cool down. Restart and the blender will automatically know when it is ready to blend again.

Er

The screen will display “Er” when the touch interface has been held more than 30 seconds. To resolve, clean the touch surface with a dry wipe, making sure no liquid residue is left behind. Then press power and restart.

SMART SENSING FUNCTIONS NOT WORKING

The smart sensing functions of the unit work through sensing and advanced intelligence. Sometimes with different incoming voltages or after repeated use of the blender it may need a “Tune Up.” Run the following calibration cycle to realign the smart sensing functions:

1. Place 1 cup of water into the large jar with the blade assembly attached.
2. Assemble to the appliance base and place the blender lid on top of the jar.
3. Press Crush and Chop at the same time for 3-5 seconds. “C” will appear on the display.
4. Press play. The calibration will run automatically for 7-10 seconds.
5. When the unit finishes calibrating, it will return to the “On” mode. The calibration is now complete and can be used as intended.

This product contains no user serviceable parts. Refer service to qualified service personnel.

Care and Cleaning

Cleaning

1. Before cleaning, turn off and unplug the appliance.
2. Lift the blending jar by the handle off the base.
3. Remove jar base by turning it counterclockwise until loose.
4. Remove the blade assembly.

Caution: Blades are sharp. Handle carefully.

5. Remove lid.
6. Wash removable parts by hand or in the dishwasher. Place the jar on the bottom rack and the rest of the parts on the top rack only.

Helpful Tips

- For quick cleanup, combine 1 cup hot water and a drop of liquid dish soap in the blending jar.
- Cover and blend on low speed for about 30 seconds.
- Discard liquid and rinse thoroughly.

Important:

- Do not place the jar parts in boiling liquids.
- Do not immerse the base in liquid. Wipe the base with a damp cloth and dry thoroughly.
- Remove stubborn spots by rubbing with a damp cloth and nonabrasive cleaner.
- Note: Do not use rough scouring pads or cleansers on parts or finish.

Guarantee

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Consumables are excluded. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 3 years from first retail purchase

SERVICE

The product isn't user-serviceable. If it's not working, call our service centre.

03452302366 (UK local rate number) **PowerXLSupport@eu.spectrumbrands.com**

Spectrum Brands (UK) Ltd, Fir Street, Failsworth, Manchester, M35 0HS

www.powerxl.co.uk

PowerXLTM

SENSIMAXTM **BLENDER**

www.powerxl.co.uk

**Distributed By:
UK & Ireland:**

Spectrum Brands (UK) Ltd.
Fir Street, Failsworth, Manchester M35 0HS, England

Russell Hobbs Deutschland GmbH.

Am Unisyspark 1, 65843 Sulzbach, Germany
©2025 Empower Brands LLC.

POWERXL is a Registered Trademark
of Empower Brands LLC.

TM are trademarks of Empower Brands LLC